

Camden


Cinema Furniture

Instructions for Assembling and Disassembling the Chair

Assembling the Seat Back to the Seat Base

The Seat Base has two mounting posts — one on each side.

1. Holding the Seat Back with one hand on the bottom and one hand on top, position both of the glide rails on the inside of the Seat Back over the mounting posts on the Seat Base.
2. With the mounting posts inserted into the glide rails, push the Seat Back down completely onto the Seat Base. As no “snap” or “click” noise will be made to indicate the lock, grasp the Seat Back with both hands and try to pull up. If the Seat Base is installed properly, you should not be able to pull the Seat Back up on either the left or the right.
3. *If* the Seat Back is not secure, check alignment of the mounting post and glide rail, and re-try.

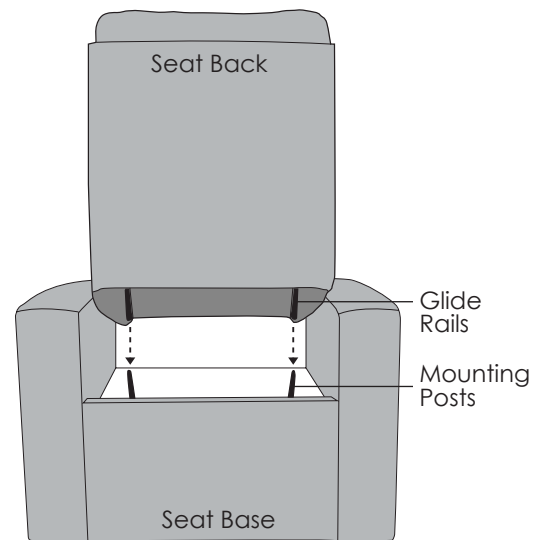

Disassembling the Seat Back from the Seat Base

1. Facing chair straight on, insert one hand in between the middle of the Seat Back and Seat Base seam and place opposite hand on the side of the Seat Back.
2. With the hand inserted in chair, turn hand so palm is facing upward and slide toward left or right side of seat back (Left hand to right side; right hand to left side).
3. Feel for glide rail on inside of Seat Back and locate the clip at the top. Place one finger inside the clip, slightly pull away and lift same side of Seat Back with opposite hand. Repeat on opposite side of seat.
4. With both sides of Seat Back loose, lift up and remove.

